



E471157

Towel Warmer

User Manual

Please read this manual carefully before using the product and keep it properly.

WARNING


- A towel warmer with ultraviolet can only work after door is closed, otherwise, the radiation will be harmful to human. (For model with UV lamp)

SPECIAL ATTENTION


- Keep towels a little wet. Do not insert towels that are too wet where water can drip from the towels.
- Do not overfill and keep the towels 1 inch apart from the heating chamber.
- A towel warmer with ultraviolet can only work after door is closed, otherwise, the radiation will be harmful to human. (For model with UV lamp)
- To avoid burns, do not take towels out from towel warmer on any bare surfaces of the body.

ATTENTION

- Earth line is required with power plug.
- Warming time varies depending on temperature of the room.
- Clean the water in the drip tray as needed.
- Professional person is required for UV lamp repair.
- Unplug unit immediately if abnormal condition occurs during use, such as abnormal noise, smell, temperature rising, smoking, etc.
- Professional person is required for repair.
- This product is not designed for children.
- Professional person is required for power cord repair.

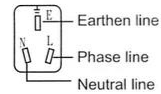

PARTS LIST

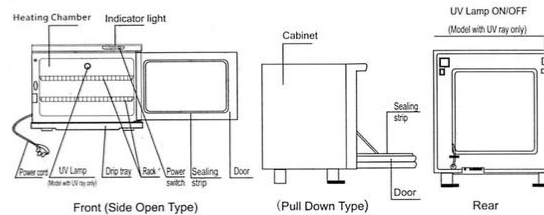

SPECIFICATION

Model Name	34006	34007
Power	120V~ 60Hz	
Input	130W	180W
Capacity	8L	18L
Warming Temperature	158~175 F	
UV Lamp working life	≥1000h	
Heater working life	≥3000h	
Rack bearing weight	40-45 Wet Towels or 10 Facial Towels	80-96 Wet Towels or 20 Facial Towels
Net weight	8.8 pounds	13.2 pounds
Product size (H×W×D)	10.1"×13.8"×11.1"	14.0"×17.7"×11.2"

USER GUIDE

- While the unit is plugged in, insert the towels on the rack and then close the door.
- Press the ON button, the indicator light will then turn on, means the warmer will warm the towels. Press the UV lamp switch at the rear of the unit to power on the UV function for warming the towels with the UV ray sterilization.
- Only warming the towels if the UV lamp switch is OFF.
- UV lamp will turn off once the door is opened, but will turn on again when the door is closed.
- Press the OFF button, the indicator light will then turn off, the warmer stops working.

Maintenance

- Clean the product frequently with the unit not plugged in to a wall outlet.
- If an abnormal occurrence happens during operation, please unplug immediately and contact tech support before using again.

Troubleshooting	Reason Analysis	Solution
No Power	Bad contact of plug	Plug again or repair
	Temperature controller broken	Change temperature controller
	Power cord broken	Change power cord
UV Lamp off (For model with UV lamp)	Door switch broken	Change door switch
	UV lamp broken	Change UV lamp
No heating	Heater broken	Change heater
	Temperature controller broken	Change temperature controller